


# CORNERSTONE 100

## >>> Abutment

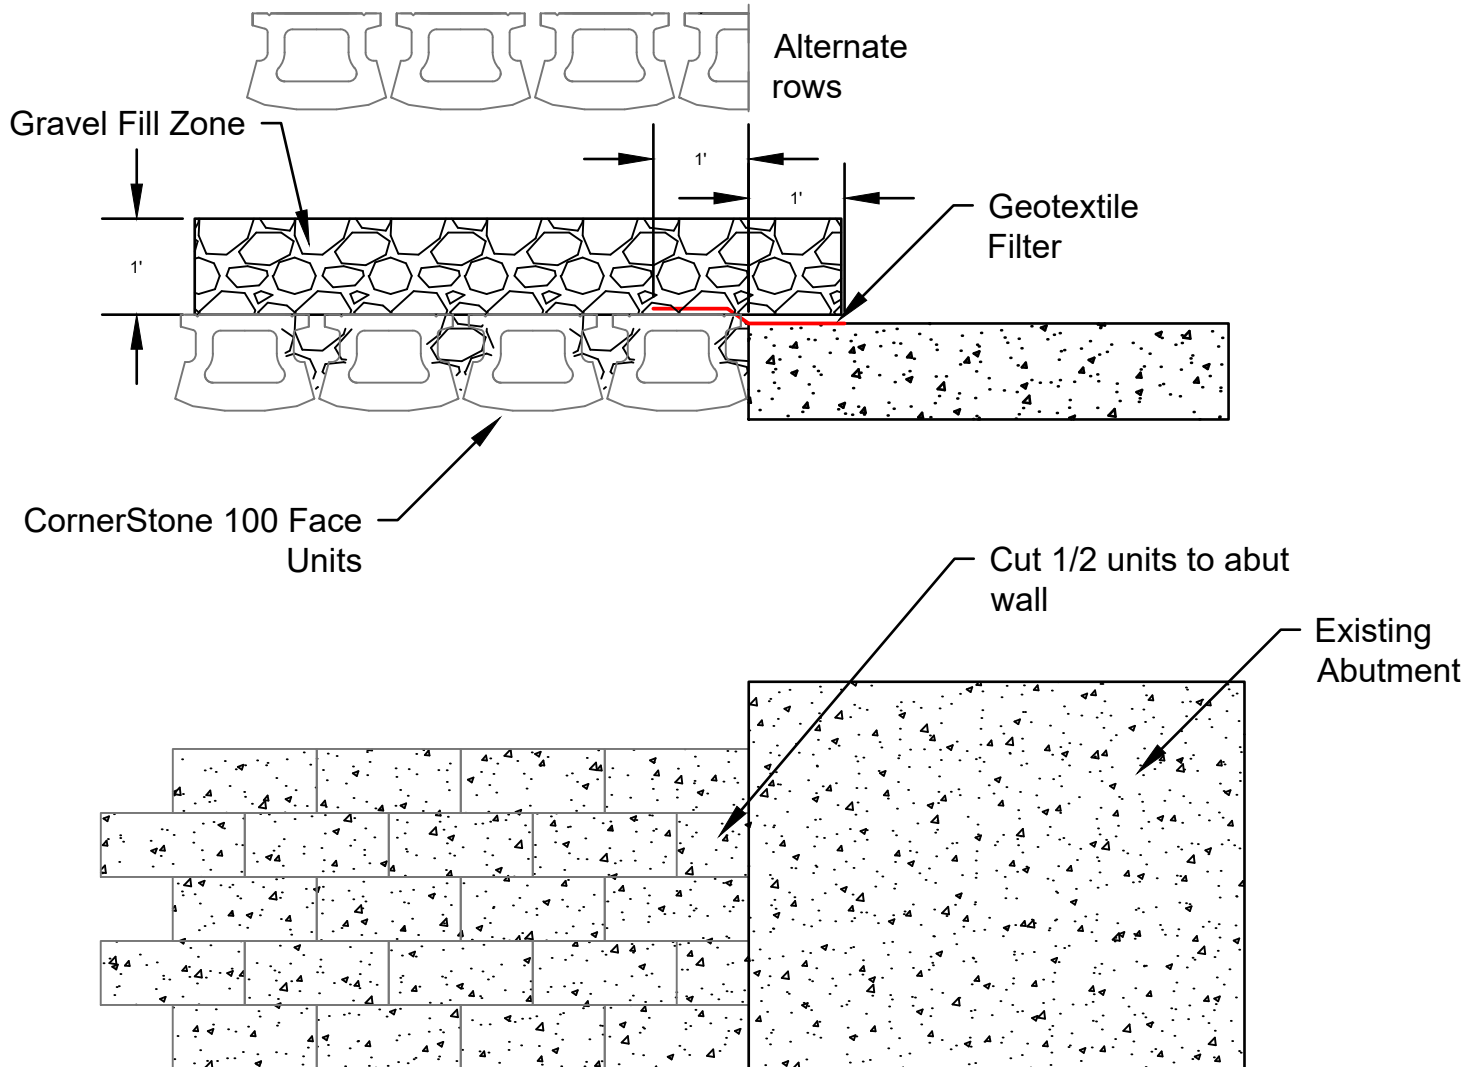

It is also a good practice to use bi-axial geogrid under the leveling pad near the area where the SRW abuts the existing structure to minimize settlement.